


Install Instructions

Hook

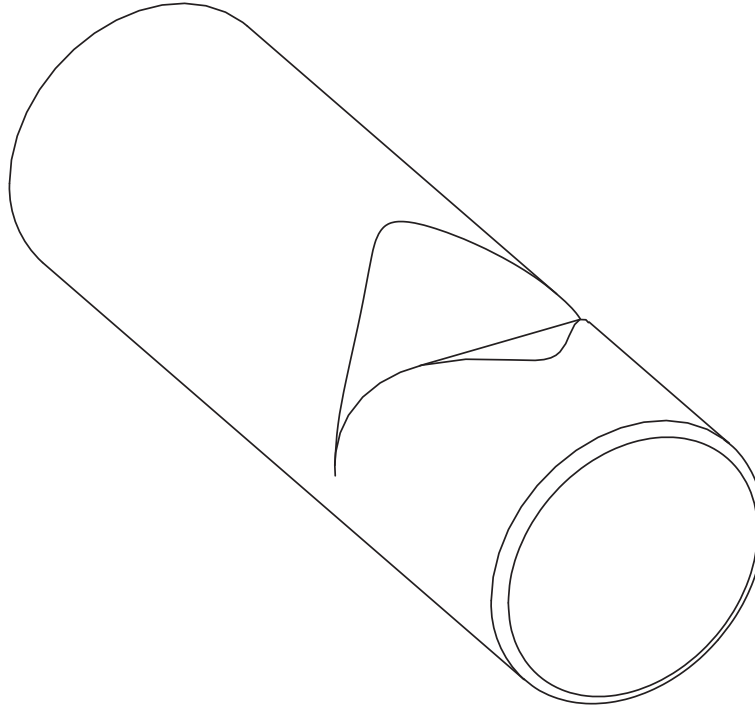

Scan for
Australian
Warranty



Scan for
New Zealand
Warranty



Scan for
Product &
Finish Care
Information



Contact Us
Southern Design Group

Australia
14 - 16 Stepney Street,
Stepney, South Australia 5069
P: +61 (0)8 8362 1133
info@bankstonarchitectural.com.au
bankstonarchitectural.com.au

New Zealand
P: +64 (0)6 359 0008
info@bankstonarchitectural.co.nz
bankstonarchitectural.co.nz

SDG Trading Pty Ltd
trading as Bankston Architectural
ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only.

1. Installing the Hook


- 1.1 Mark your selected place of installation. (Figure 1)
- 1.2 Remove the pencil spindle from the hook by loosening the grub screw. (Figure 2)
- 1.3 Drill appropriate sized pilot hole for the wood screw at your selected install point.
- 1.4 Fit pencil spindle using wood screw provided. (Figure 3)
- 1.5 Place hook on pencil spindle and tighten the grub screw to secure.

IMPORTANT:

Please install this hardware in the following order to ensure its warranty is not voided.

- 1. Install the hardware on raw/ unfinished door using the instructions provided.
- 2. Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.
- 3. Paint / finish door.
- 4. Reinstall hardware.

Included

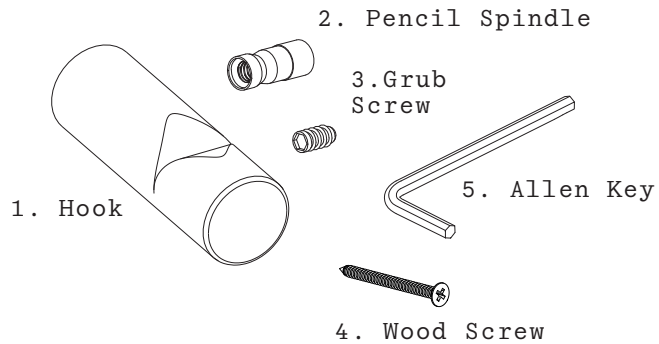

Not Included

